

CLASSE Technical Information

- **Date:** *June 12, 2008*
- **Model:** *All Models*
- **Subject:** *Reset Procedures*

Delta Series & latest Omega Monoblocks

CA-2100, CA-2200, CA-3200, CA-5200, CA-M400, latest Omega Monoblocks –

- Software Version 1.0 – Unplug the unit.
- Software Version 2.01 – Press and hold the standby button for 3 seconds.

CA-5100 –

- Software Version 1.0 – Unplug the unit.
- Software Version 1.03c – Press and hold the standby button for 3 seconds.

All Delta Models with a TFT display

CAP-2100, CDP-102, CDP-202, CDP-300, CDP-502, CDT-300, CP-500, CP-700, SSP-300, SSP-600, SSP-800 –

- Power on the unit, and go to the Menu. Using the remote, press F1, F2, F3, F4 in order. This will change the display to a Tech Menu. Select 'Restore Factory Defaults' to reset the unit. If there are programmed settings that need to be saved, choose the 'Archive Settings' button prior to selecting the Restore Factory Defaults. After the unit has been reset, repeat the above procedure but now choose 'Restore Settings' to restore the programmed settings to the unit.

Legacy/ Omega/ Omicron Units (excluding latest Omega Monoblock)

AMPS

All amps except the CA-201 side heatsinks version can be reset by disconnecting the AC line cord, then reconnecting. Unlike the other amps, the CA-201 side heatsinks version needs to be left disconnected for about 5 minutes so that its capacitors can drain.

CD players

There is no formal reset procedure, other than disconnecting the AC line cord and reconnecting 15-20 seconds later.

Preamps

Only CP-65 has reset procedure – Press the MENU button on the remote to enter Setup. From the Setup Menu, use the up and down buttons on the remote to select SYSTEM from the

available choices, and press the right arrow button to confirm the selection. From the System Menu, press the down button on the remote to go to the Reset menu. From the Reset menu, press the right button on the remote, and confirm the reset by pressing the Enter button. Once the reset has been confirmed, the unit will go into standby, and all changes made in setup will be restored to their default settings.

CT-10 – The Reset switch is located on the back panel of the unit in a small hole to the left of the RS232 connector. Use a toothpick or other small non-metal tool to push the switch. After reset, the default tunings of the unit is FM 108.0, AM 1720.

SSP-25 – Press “MENU” then “>” twice to display “Main Menu – System Set Up”. Press “ENTER” then the “>” 4 times to reach “System Set Up – Feature Set Up”. Press Enter then the “>” 3 times to reach “Feature Set up – Factory Reset”. Press ENTER twice. Press MENU to exit screen. Pressing MENU four times returns the SSP to full operation.

SSP-30/60 – Can only be reset with Titan Updater software, available at the Factory.

SSP-50 – While in Main/Memory screen, highlight Factory Defaults using the Up/Down arrow keys. Press > twice then ENTER. Press MENU twice to return to normal operation.

SSP-75 – From the OSD, select the System Setup menu. Choose the Factory Reset option, and confirm by pressing the Enter button on the remote. Once the reset has been confirmed, the unit will go into standby, and all changes made in setup will be restored to their default settings.