

RSX 1560

1 Byte waveform format

Baud Rate	Parity	Valid data bits	Stop bit value	Handshaking	Data type
115200	n	8	1	none	string

1. RSX1560 -> PC

A. Display Data

Start	Count	ID	Type	Data					Chk	
0xfe	0x17	0xca	0x20	char1	...	char42	flag1	...	flag5	xx

char1~42
ASCII Characters

flag1:		flag2:		flag3:		flag4:		flag5:	
bit7	Optical	bit7	Dolby Digital	bit7	PRESET	bit7	Zone	bit7	FL
bit6	Coaxial	bit6	Dolby Pro Logic	bit6	RDS	bit6	"5.1"	bit6	C
bit5	[1]	bit5	dts	bit5	Stereo (Tuner)	bit5	"7.1"	bit5	FR
bit4	[2]	bit4	ES	bit4	Tuned	bit4	">"	bit4	SL
bit3	[3]	bit3	EX	bit3	Standby LED	bit3	"<"	bit3	SR
bit2	[4]	bit2	HDMI	bit2	Zone 2	bit2	Zone 3	bit2	SW
bit1	[5]	bit1	II	bit1	display mode1	bit1	Zone 4	bit1	SBL
bit0	[A]	bit0	x	bit0	display mode0	bit0	SB	bit0	SBR

	Normal	FL off
display mode1	0	1
display mode0	0	0

The following RS232 feedback only available after Main Software V1.2.2 installed.

B. 12V Trigger Display Data

Start	Count	ID	Type	Data					Chk
0xfe	0x07	0xca	0x21	flag1	flag2	flag3	flag4	flag5	xx

Data	0	Off
	1	On

flag1: All Trigger		flag2: Listen Trig		flag3: Z2 Trigger		flag4: Z3 Trigger		flag5: Z4 Trigger	
bit7		bit7		bit7		bit7		bit7	
bit6		bit6		bit6		bit6		bit6	
bit5	Trigger 6	bit5	Trigger 6	bit5	Trigger 6	bit5	Trigger 6	bit5	Trigger 6
bit4	Trigger 5	bit4	Trigger 5	bit4	Trigger 5	bit4	Trigger 5	bit4	Trigger 5
bit3	Trigger 4	bit3	Trigger 4	bit3	Trigger 4	bit3	Trigger 4	bit3	Trigger 4
bit2	Trigger 3	bit2	Trigger 3	bit2	Trigger 3	bit2	Trigger 3	bit2	Trigger 3
bit1	Trigger 2	bit1	Trigger 2	bit1	Trigger 2	bit1	Trigger 2	bit1	Trigger 2
bit0	Trigger 1	bit0	Trigger 1	bit0	Trigger 1	bit0	Trigger 1	bit0	Trigger 1

2. PC -> RSX1560

Start	Count	ID	Type	Key	Chk
0xfe	0x03	0xca	0x10	xx	xx

key:		key:		key:		key:		key:	
0x00	RMC Vol+	0x10	Contour LF-	0x20	Tune / Preset	0x30	7	0x40	
0x01	RMC Vol-	0x11	Stereo	0x21	Preset Scan	0x31	8	0x41	
0x02	CD	0x12	3 Stereo	0x22	Surround+	0x32	9	0x42	
0x03	Tuner	0x13	Pro Logic	0x23	Zone	0x33	0	0x43	
0x04	Tape	0x14	DSP	0x24	Band	0x34		0x44	RDS Display
0x05	Video1	0x15	5.1CH[Multi Input]	0x25	Freq. Direct	0x35		0x45	PTY
0x06	Video2	0x16	Dynamic	0x26	Mono	0x36		0x46	TP
0x07	Video3	0x17	Rec	0x27	Memory / Enter	0x37		0x47	TA
0x08	Video4	0x18	OSD Menu	0x28	Tuning+	0x38		0x48	
0x09	Video5	0x19	OSD Enter	0x29	Tuning-	0x39		0x49	
0x0a	Power	0x1a	OSD Right(+)	0x2a	1	0x3a		0x4a	Power Off
0x0b	Vol+	0x1b	OSD Left(-)	0x2b	2	0x3b		0x4b	Power On
0x0c	Vol-	0x1c	OSD Up/Trim Sel	0x2c	3	0x3c		0x4c	C
0x0d	Contour HF+	0x1d	OSD Down/Dynamic	0x2d	4	0x3d		0x4d	S
0x0e	Contour HF-	0x1e	Mute	0x2e	5	0x3e		0x4e	R
0x0f	Contour LF+	0x1f	Digital In Select	0x2f	6	0x3f		0x4f	Filter (EQ)

key:		key:		key:	
0x50		0x60	Neo:6 Music	0x70	Preset Down
0x51		0x61	Neo:6 Cinema	0x71	Power All Zones Off
0x52	Display On/Off	0x62	PLII Music Panorama on/off toggle	0x72	Frequency Up
0x53	PLII / 3 Stereo	0x63	PLII Music Dimension_up [0~6]	0x73	Frequency Down
0x54	dts Neo:6	0x64	PLII Music Dimension_down [0~6]	0x74	PLII Game
0x55	FM	0x65	PLII Music CenterWidth_up [0~7]	0x75	Output Resolution
0x56	AM	0x66	PLII Music CenterWidth_down [0~7]	0x76	
0x57	Music 1	0x67	Tone	0x77	
0x58	Music 2	0x68	DD EX / XS on/off	0x78	HDMI Amp Mode
0x59	Music 3	0x69	Tuning select	0x79	HDMI TV Mode
0x5a	Music 4	0x6a	Preset select	0x7a	
0x5b	5 Ch Stereo	0x6b	Source	0x7b	
0x5c	7 Ch Stereo	0x6c	Mute On	0x7c	
0x5d	PLII Cinema	0x6d	Mute Off	0x7d	
0x5e	PLII Music	0x6e	Party Mode Toggle	0x7e	
0x5f		0x6f	Preset Up	0x7f	NULL key
				0xff	Display Refresh

3. PC -> RSX1560 (Direct Select Main Zone)

4. PC -> RSX1560 (Direct Select Record Source)

6. PC -> RSX1560 (Direct Select Zone 3)

Start	Count	ID	Type	Key	Chk
0xfe	0x03	0xca	0x17	xx	xx

key:		key:		key:		key:		key:	
0x00	RMC Vol+	0x20	Tune/Preset	0x2a	1	0x4a	Zone Power Off	0x6e	Party Mode
0x01	RMC Vol-	0x21	Preset Scan	0x2b	2	0x4b	Zone Power On	0x6f	Preset Up
0x02	CD	0x22		0x2c	3	0x55	FM	0x70	Preset Down
0x03	Tuner	0x23		0x2d	4	0x56	AM	0x71	All Zones Pwr Off
0x04	Tape	0x24	Band	0x2e	5	0x69	Tune	0x72	Frequency Up
0x05	Video1	0x25		0x2f	6	0x6a	Preset	0x73	Frequency Down
0x06	Video2	0x26	Mono	0x30	7	0x6b	Source	0x74	
0x07	Video3	0x27		0x31	8	0x6c	Mute On	0x75	
0x08	Video4	0x28	Tune+	0x32	9	0x6d	Mute Off	0x76	
0x09	Video5	0x29	Tune-	0x33	0				
0x0a	Zone Power					0x1e	Mute		

7. PC -> RSX1560 (Direct Select Zone 4)

Start	Count	ID	Type	Key	Chk
0xfe	0x03	0xca	0x18	xx	xx

key:		key:		key:		key:		key:	
0x00	RMC Vol+	0x20	Tune/Preset	0x2a	1	0x4a	Zone Power Off	0x6e	Party Mode
0x01	RMC Vol-	0x21	Preset Scan	0x2b	2	0x4b	Zone Power On	0x6f	Preset Up
0x02	CD	0x22		0x2c	3	0x55	FM	0x70	Preset Down
0x03	Tuner	0x23		0x2d	4	0x56	AM	0x71	All Zones Pwr Off
0x04	Tape	0x24	Band	0x2e	5	0x69	Tune	0x72	Frequency Up
0x05	Video1	0x25		0x2f	6	0x6a	Preset	0x73	Frequency Down
0x06	Video2	0x26	Mono	0x30	7	0x6b	Source	0x74	
0x07	Video3	0x27		0x31	8	0x6c	Mute On	0x75	
0x08	Video4	0x28	Tune+	0x32	9	0x6d	Mute Off	0x76	
0x09	Video5	0x29	Tune-	0x33	0				
0x0a	Zone Power					0x1e	Mute		

8. PC -> RSX1560 (Volume Direct)

Start	Count	ID	Type	Key	Chk
0xfe	0x03	0xca	0x30	xx	xx

key:		key:	
0x00	volume min	0x10	volume 16
0x01	volume 1		
0x02	volume 2	0x20	volume 32
0x03	volume 3		
0x04	volume 4	0x30	volume 48
0x05	volume 5		
0x06	volume 6	0x40	volume 64
0x07	volume 7		
0x08	volume 8	0x50	volume 80
0x09	volume 9		
0x0a	volume 10	0x5f	volume 95
0x0b	volume 11	0x60	volume max
0x0c	volume 12		
0x0d	volume 13		
0x0e	volume 14		
0x0f	volume 15		

9. PC -> RSX1560 (Volume Direct Zone 2)

Start	Count	ID	Type	Key	Chk
0xfe	0x03	0xca	0x32	xx	xx

key:		key:	
0x00	volume min	0x10	volume 16
0x01	volume 1		
0x02	volume 2	0x20	volume 32
0x03	volume 3		
0x04	volume 4	0x30	volume 48
0x05	volume 5		
0x06	volume 6	0x40	volume 64
0x07	volume 7		
0x08	volume 8	0x50	volume 80
0x09	volume 9		
0x0a	volume 10	0x5f	volume 95
0x0b	volume 11	0x60	volume max
0x0c	volume 12		
0x0d	volume 13		
0x0e	volume 14		
0x0f	volume 15		

10. PC -> RSX1560 (Volume Direct Zone 3)

Start	Count	ID	Type	Key	Chk
0xfe	0x03	0xca	0x32	xx	xx

key:		key:	
0x00	volume min	0x10	volume 16
0x01	volume 1		
0x02	volume 2	0x20	volume 32
0x03	volume 3		
0x04	volume 4	0x30	volume 48
0x05	volume 5		
0x06	volume 6	0x40	volume 64
0x07	volume 7		
0x08	volume 8	0x50	volume 80
0x09	volume 9		
0x0a	volume 10	0x59	volume 89
0x0b	volume 11	0x60	volume max
0x0c	volume 12		
0x0d	volume 13		
0x0e	volume 14		
0x0f	volume 15		

11. PC -> RSX1560 (Volume Direct Zone 4)

Start	Count	ID	Type	Key	Chk
0xfe	0x03	0xca	0x32	xx	xx

key:		key:	
0x00	volume min	0x10	volume 16
0x01	volume 1		
0x02	volume 2	0x20	volume 32
0x03	volume 3		
0x04	volume 4	0x30	volume 48
0x05	volume 5		
0x06	volume 6	0x40	volume 64
0x07	volume 7		
0x08	volume 8	0x50	volume 80
0x09	volume 9		
0x0a	volume 10	0x59	volume 89
0x0b	volume 11	0x60	volume max
0x0c	volume 12		
0x0d	volume 13		
0x0e	volume 14		
0x0f	volume 15		

The following RS232 commands only available after Main Software V1.2.2 installed.

12. PC -> RSX1560 (12V Trigger Direct)

Start	Count	ID	Type	Key	Chk
0xfe	0x03	0xca	0x40	xx	xx

key:		key:	
0x00	Listen Trigger 1	0x10	Zone 3 Trigger 5
0x01	Listen Trigger 2	0x11	Zone 3 Trigger 6
0x02	Listen Trigger 3	0x12	Zone 4 Trigger 1
0x03	Listen Trigger 4	0x13	Zone 4 Trigger 2
0x04	Listen Trigger 5	0x14	Zone 4 Trigger 3
0x05	Listen Trigger 6	0x15	Zone 4 Trigger 4
0x06	Zone 2 Trigger 1	0x16	Zone 4 Trigger 5
0x07	Zone 2 Trigger 2	0x17	Zone 4 Trigger 6
0x08	Zone 2 Trigger 3		
0x09	Zone 2 Trigger 4		
0x0a	Zone 2 Trigger 5		
0x0b	Zone 2 Trigger 6		
0x0c	Zone 3 Trigger 1		
0x0d	Zone 3 Trigger 2		
0x0e	Zone 3 Trigger 3		
0x0f	Zone 3 Trigger 4		